


SMART Board™ Interactive Whiteboard Setup with USB Cable

NOTE: The instructions below are for the SMART Board interactive whiteboard 500 series and apply to both a desktop and a laptop computer.

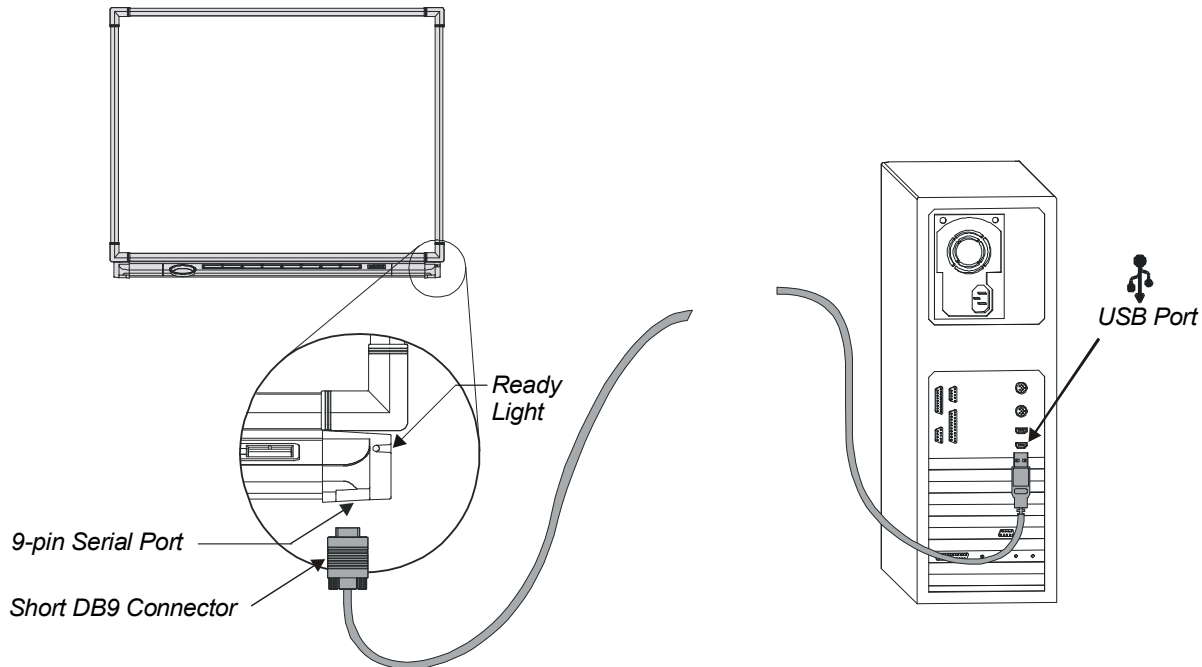

Connecting the SMART Board Interactive Whiteboard to Your Computer

- 1 Before connecting the SMART Board interactive whiteboard to your computer, install SMART Board software by inserting the CD-ROM that came with your interactive whiteboard and following the on-screen instructions. If you don't have a CD-ROM, or if you're not sure whether your CD-ROM is for the latest version of SMART Board software, you can download the latest version from www.smarttech.com/support/software.
- 2 If the SMART Board icon with exclamation point, which indicates SMART Board software is running but an interactive whiteboard is not yet connected to the computer, does *not* appear in the Microsoft Windows® notification area (in the lower right portion of the desktop), select **Start > Programs > SMART Board Software**, and select **SMART Board Tools**.
- 3 Shut down your computer.
- 4 Insert the USB cable's short DB9 connector into the 9-pin serial port under the lower right side of the SMART Board interactive whiteboard and tighten the screws.
- 5 Insert the USB connector (at the other end of the USB cable) into the USB port on your computer and start your computer.



The Ready Light on the right side of the pen tray will turn red, indicating that the pen tray is receiving power. If the Ready Light has not turned red, verify that all connections are made as indicated above. When the Ready Light turns green and the SMART Board icon in the Windows notification area changes from an exclamation point to a white page with stylus, your interactive whiteboard is ready to use.



Orienting the SMART Board Interactive Whiteboard

You must orient the interactive whiteboard upon initial installation or if your whiteboard or projector has been moved or jostled. Ensure the projector, computer and SMART Board software are running.

- 1 Double-click the SMART Board icon  in the Windows notification area and press the **Orient** button.



- 2 Begin orientation at the upper-left corner. Press your finger or stylus squarely on the yellow center of each red cross in the order indicated by the white, diamond-shaped background.

